



FUEL NOZZLE MRO CAPABILITIES

PW100 SERIES

ENGINE PROGRAM	DESCRIPTION	DELAVAN PART NUMBER	REFERENCE ENGINE OEM PART NUMBER
PW100 Peanut	Fuel Nozzle Assembly	48720-1	3039755
PW100 Phase 0	Fuel Nozzle Assembly	58574	3038826
PW100 Phase 0	Fuel Nozzle Assembly	58575	3038827
PW100 Phase 0	Fuel Nozzle Assembly	65080	3039975
PW100 Phase 0	Fuel Nozzle Assembly	69708	3045670
PW100 Phase 0	Fuel Nozzle Assembly	69709	3045672
PW100 Phase 0	Fuel Nozzle Assembly	69710	3045692
PW100 Phase 0	Fuel Nozzle Assembly	70056	3045776-01
PW100 Phase 0	Fuel Nozzle Assembly	70057	3045781-01
PW100 Phase 0	Fuel Nozzle Assembly	70058	3045788-01
PW100 Phase 0	Fuel Nozzle Assembly	57734-PH	3038108
PW100 Phase 0	Fuel Nozzle Assembly	57735-PH	3038105
PW100 Phase 0	Fuel Nozzle Assembly	58573-PH	3035669
PW100 Phase 0	Fuel Nozzle Assembly	58574-PH	3045667
PW100 Phase 0	Fuel Nozzle Assembly	58575-PH	3045668
PW100 Phase 0	Fuel Nozzle Assembly	58842-PH	3038707
PW100 Phase 0	Fuel Nozzle Assembly	58843-PH	3038704
PW100 Phase 0	Fuel Nozzle Assembly	58844-PH	3038699
PW100 Phase 0	Fuel Nozzle Assembly	65080-PH	3039971
PW100 Phase 0	Fuel Nozzle Assembly	66070-2PH	3040146
PW100 Phase 0	Fuel Nozzle Assembly	69710-PH	3045307
PW100 Phase 0	Fuel Nozzle Assembly	70056-PH	3045778-01
PW100 Phase 0	Fuel Nozzle Assembly	70057-PH	3045783-01
PW100 Phase 0	Fuel Nozzle Assembly	70058-PH	3045786-01
PW100 Phase 3	Fuel Nozzle Assembly	148852R1	3059757-01R1
PW100 Phase 3	Fuel Nozzle Assembly	149652-1R1	01R3049749-01R1
PW100 Phase 3	Primary Manifold	148535	01R3053186-01
PW100 Phase 3	Primary Manifold	148537	01R3053842-01
PW100 Phase 3	Fuel Nozzle Assembly	148851	3059760-01



FUEL NOZZLE MRO CAPABILITIES

PW100 SERIES

ENGINE PROGRAM	DESCRIPTION	DELAVAN PART NUMBER	REFERENCE ENGINE OEM PART NUMBER
PW100 Phase 3	Fuel Nozzle Assembly	148852	3059757-01
PW100 Phase 3	Fuel Nozzle Assembly	148853	3059754-01
PW100 Phase 3	Fuel Nozzle Assembly	148529-2	02R3053909-01
PW100 Phase 3	Fuel Nozzle Assembly	148530-2	02R3053917-01
PW100 Phase 3	Fuel Nozzle Assembly	149651-1	01R3049750-01
PW100 Phase 3	Fuel Nozzle Assembly	149652-1	01R3049749-01
PW100 Phase 3	Fuel Nozzle Assembly	149653-1	01R3049748-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100316	3079014-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100317	3079013-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100317R1	3079013-01R1
PW100 Phase 4	Fuel Nozzle Assembly	W2100318	3079012-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100380	03R3053917-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100381	02R3049750-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100382	02R3049749-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100382R1	02R3049749-01R1
PW100 Phase 4	Fuel Nozzle Assembly	W2100383	02R3049748-01
PW100 Phase 4	Fuel Nozzle Assembly	W2100384	03R3053909-01
PW150	Fuel Nozzle	152591	3055650-01
PW150	Fuel Nozzle	152592	3048225-01

